



Yanhua mini ACDP Connect to PC Steps

Method one: Firstly bind the [Yanhua MINI ACDP](#) device with the mobile phone, then connect with the PC version and bind the ACDP.

1、 Connect the ACDP device with a cell phone first, and confirm that the connection is normal (Picture 1). That is, the ACDP device and the phone are connected to the same WIFI. Then exit the APP or untie the device in "Cell phone bound to Mini ACDP device " (Picture 2 - Picture 3), so that the ACDP device can be bound and connected by another device (PC).

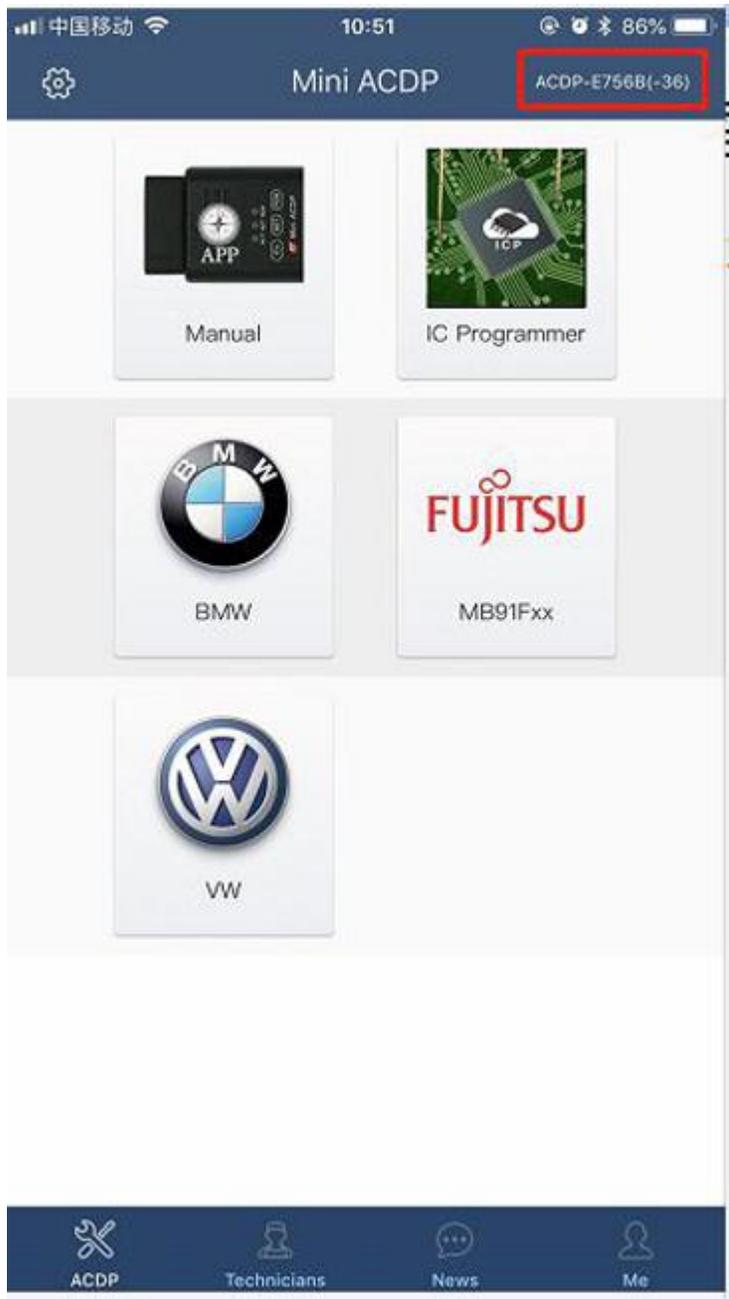

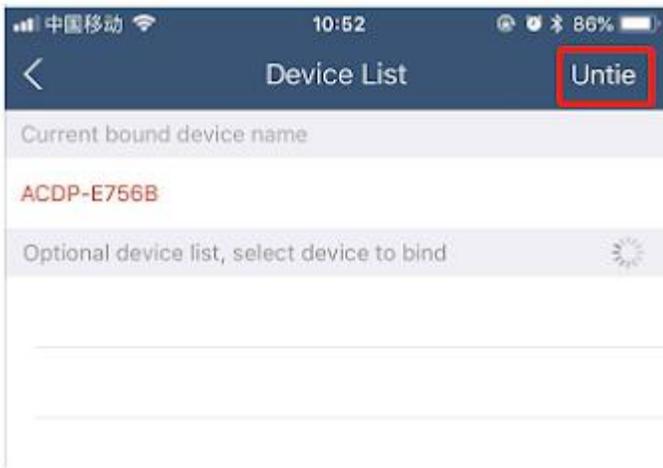

2、 Please connect the PC to the same WIFI as the cell phone (selected the one among the following three options)

A. If there is a WIFI access of the PC, please do not use wired network and connect the same WIFI as the cell phone.



B. If the WIFI router connected by cell phone supports both wired and WIFI network, please use wire to connect the PC with the router.




C. If there is NO WIFI access of the PC, please insert a WIFI adapter in the USB port and unplug the network wire of PC, then connect the same WIFI connected by cell phone.




WIFI adapter


3、 Open the ACDP software on PC, and click “Setting”

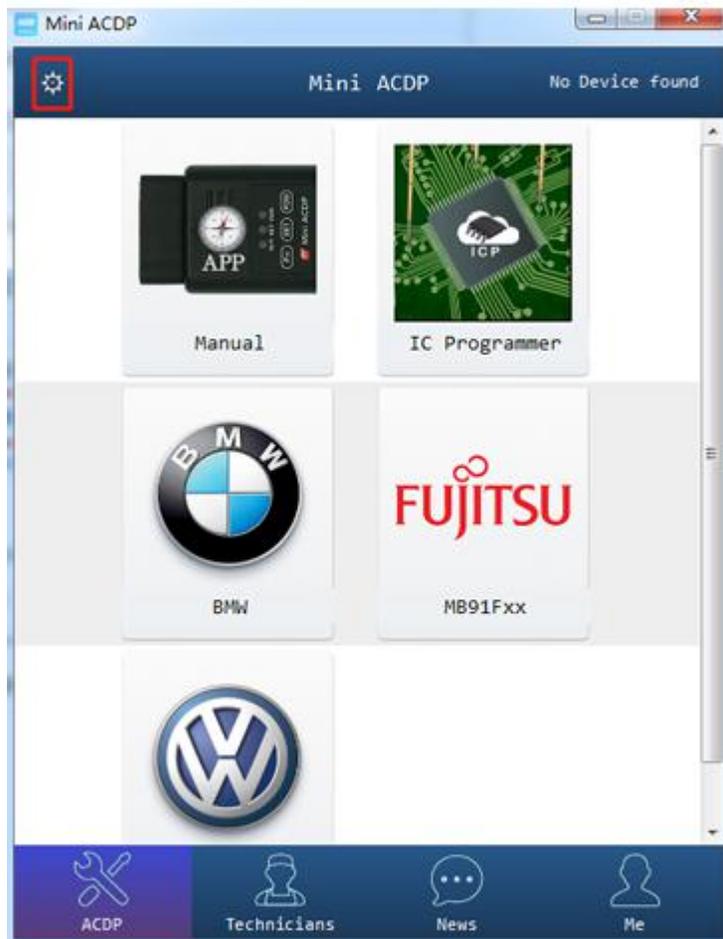

4、 Click " Bound to Mini ACDP device" on ACDP software interface.

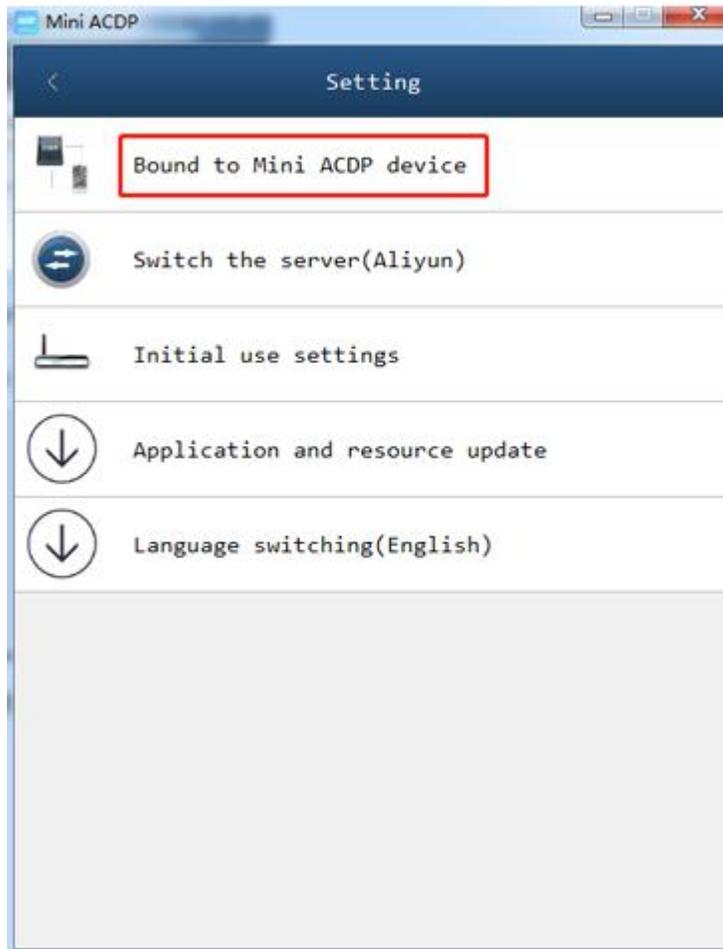

5、 Select the corresponding device ID to bind.

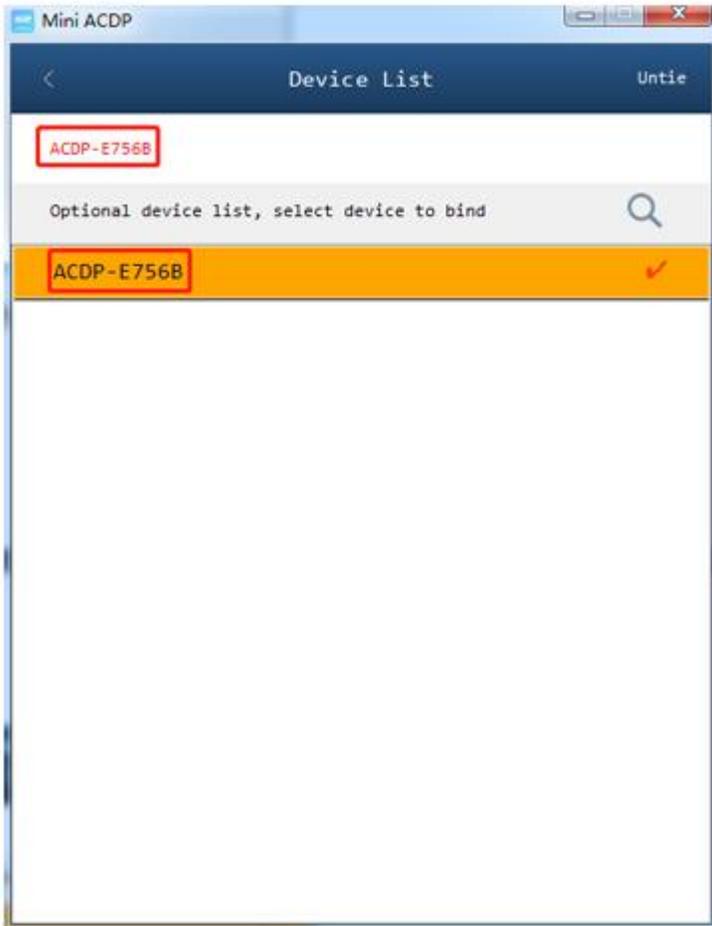

Method two: Connect the PC via Bluetooth adapter


- 1、 Plug the Bluetooth adapter into the PC USB port (Make sure the driver is installed) and the PC is connected to WIFI.




- 2、 Open ACDP software on the PC desktop.



3、 Click on SETTING in the red box as shown in the picture.

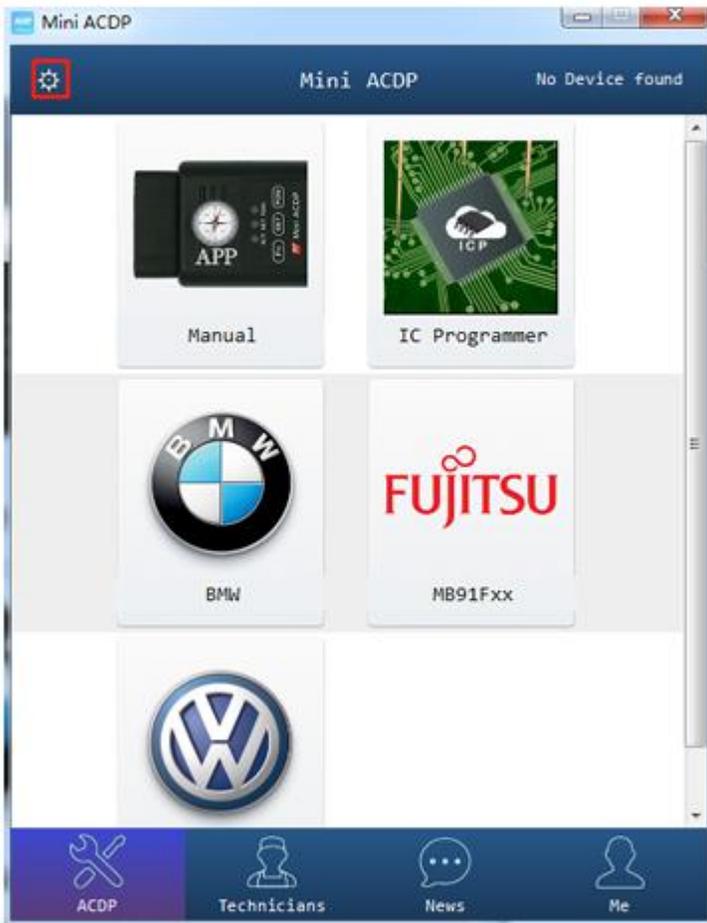

4、 Click on "Initial use settings "

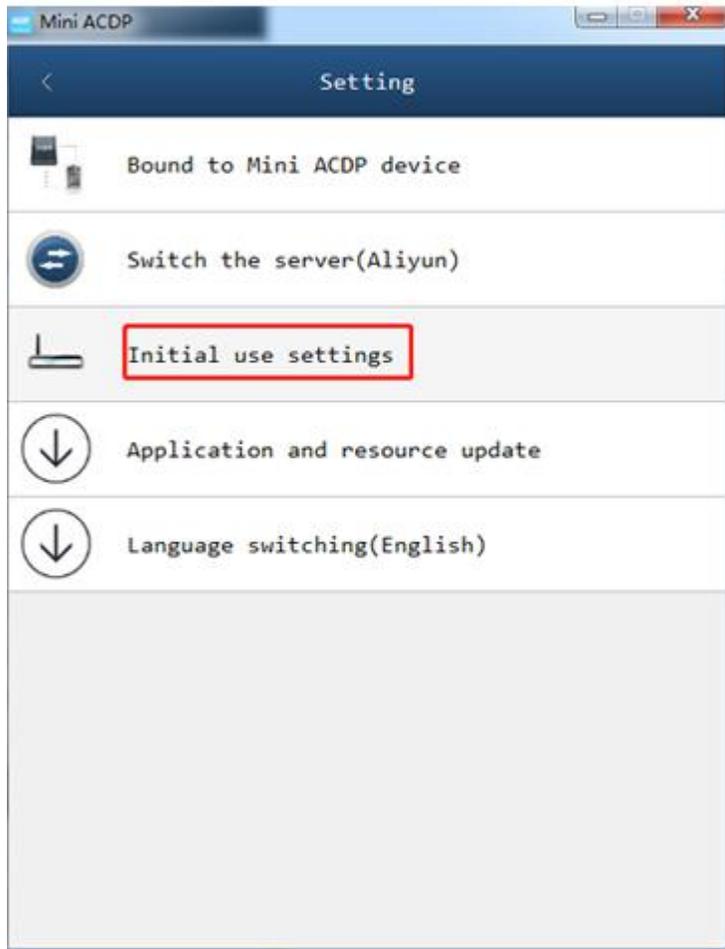

5、 Press and hold the “SET” button on the ACDP device for 7 seconds until the device buzzer's sounds, then release the “SET” button and click “Next” .

Mini ACDP

< Initial use settings(ACDP.

1. The PC is connected to the WIFI and confirm it has access to the Internet.
2. ACDP hardware access power.
3. Press and hold the the "SET" button on the ACDP device for about 7 seconds until the devic



Long-press "SET" button, ACDP sounds a short tone of "Di". Keep pressing the "SET" button.

Next


6、 Initial use of settings (WIFI configuration)

If the PC is a laptop with WIFI access function, read 6.1

If the PC is connected through a WIFI router with wired network, read 6.2

6.1: If the PC with WIFI access function, Connect the PC to WIFI.

If the PC without WIFI access function, Connect the WIFI adapter with the PC USB, Connect the WIFI and follow the steps shown as below.

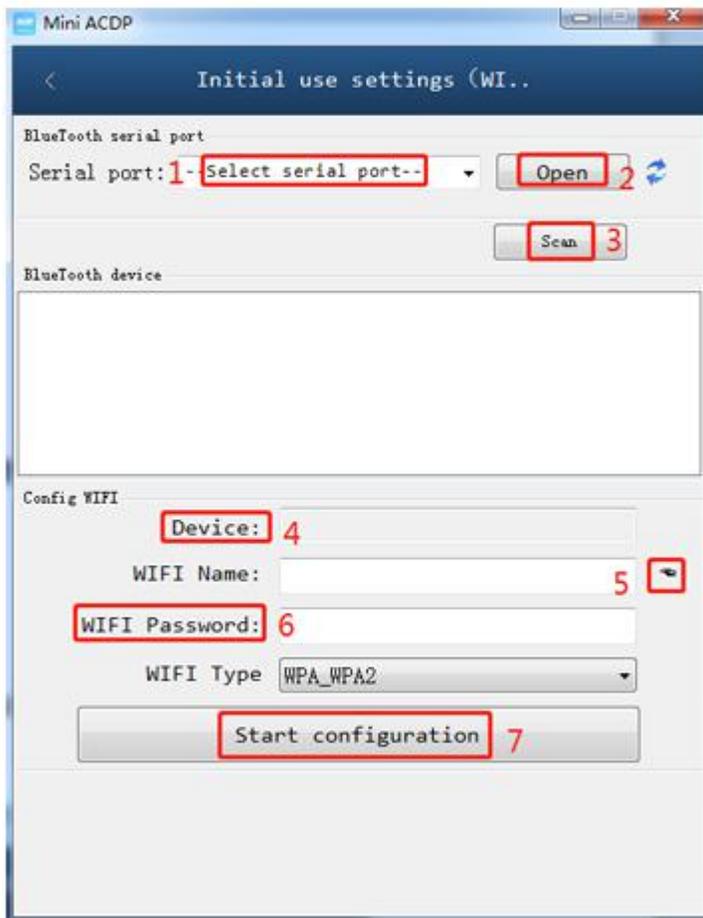

The operation result is shown in the picture as below.

Mini ACDP

Initial use settings (WI..

Bluetooth serial port

Serial port: USB Serial Port (COM38)

Bluetooth device

010203041438

Config WIFI


Device: 010203041438

WIFI Name: HUAWEI-B315-8AD0


WIFI Password: 30529168

WIFI Type: WPA_WPA2


6.2: If the PC without WIFI access function, the PC is connected through a WIFI router with wired network. Follow the steps shown as below.

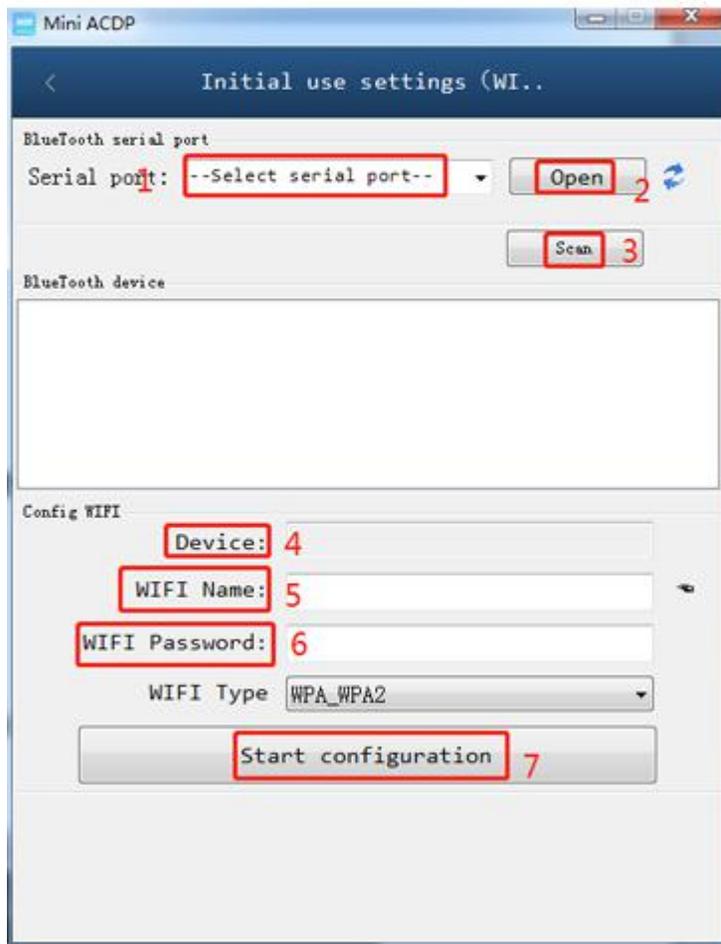

The operation result is shown in the picture as below.

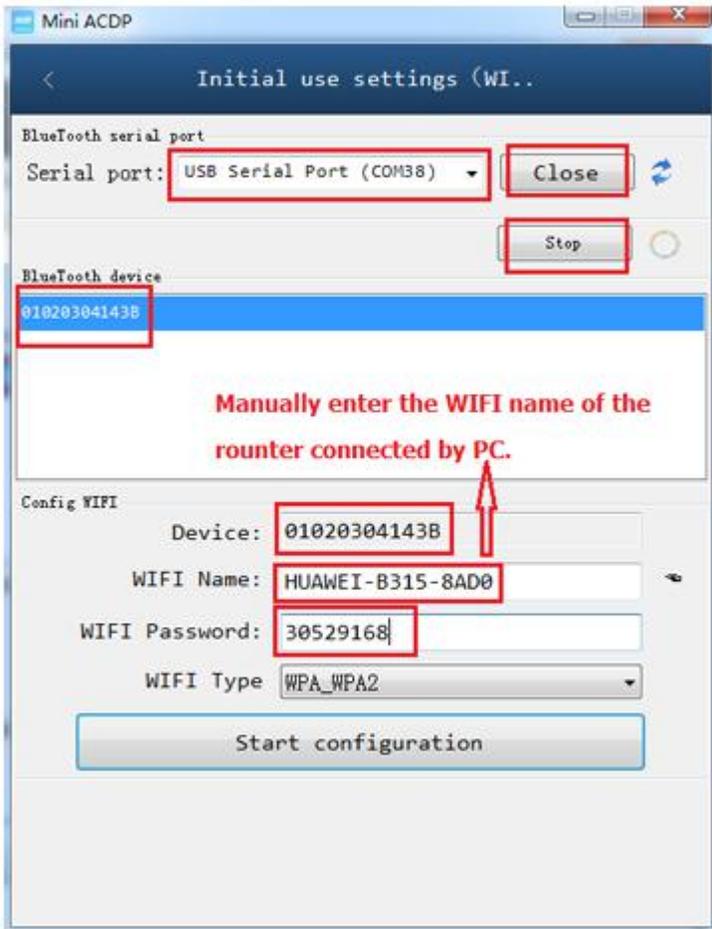


7、 The software prompts "YanhACDP device connected to WIFI successfully", click "OK".

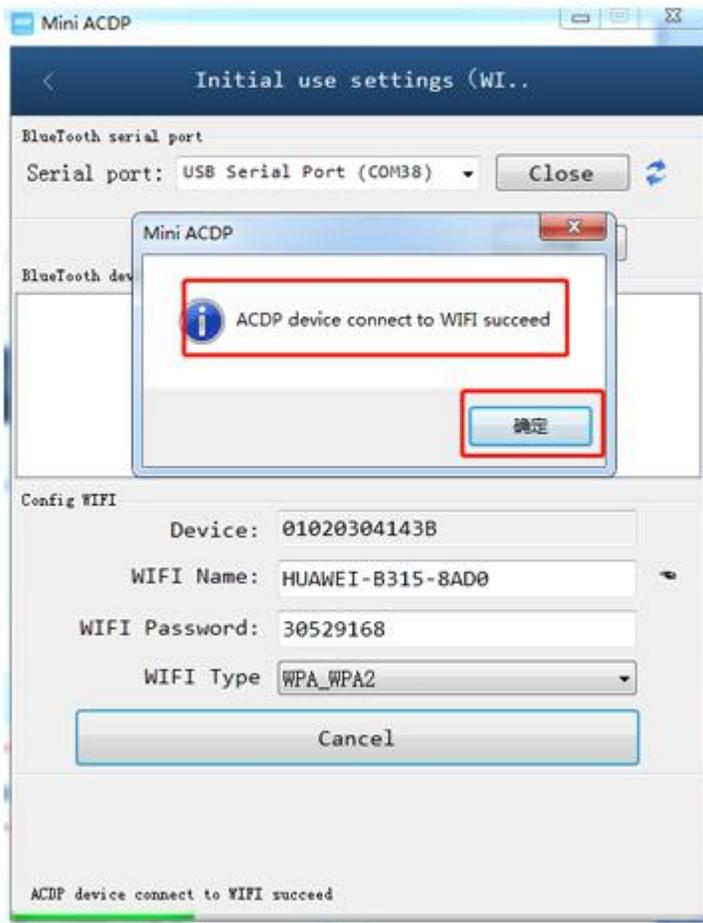


8、 Select the corresponding device ID to bind



9、 Confirm the bound device ID, click “Back” .

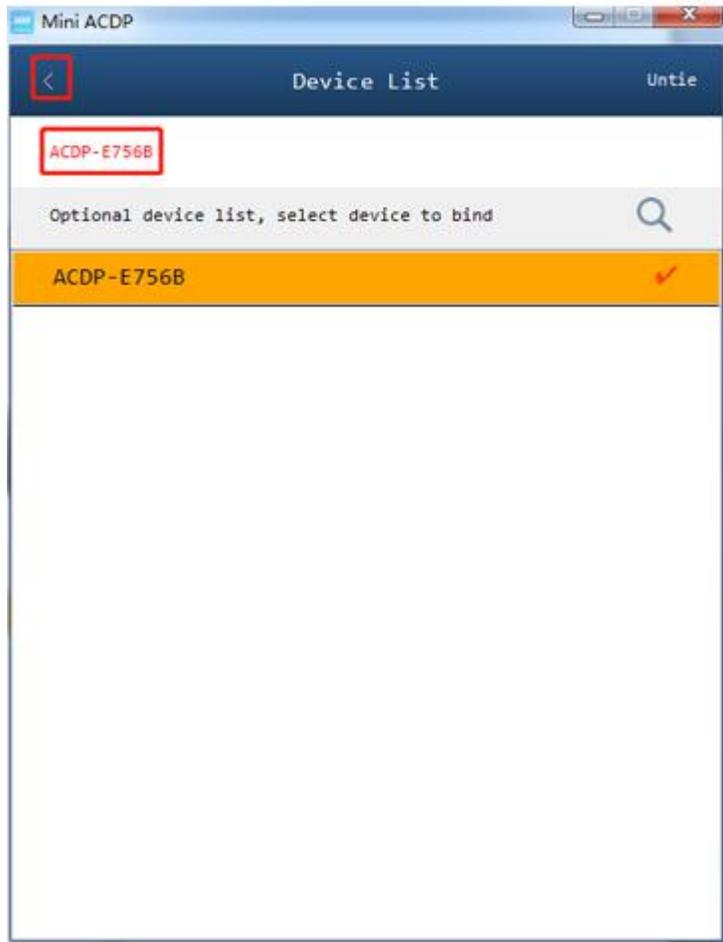

10、 Confirm that the device is successfully bound and connected.

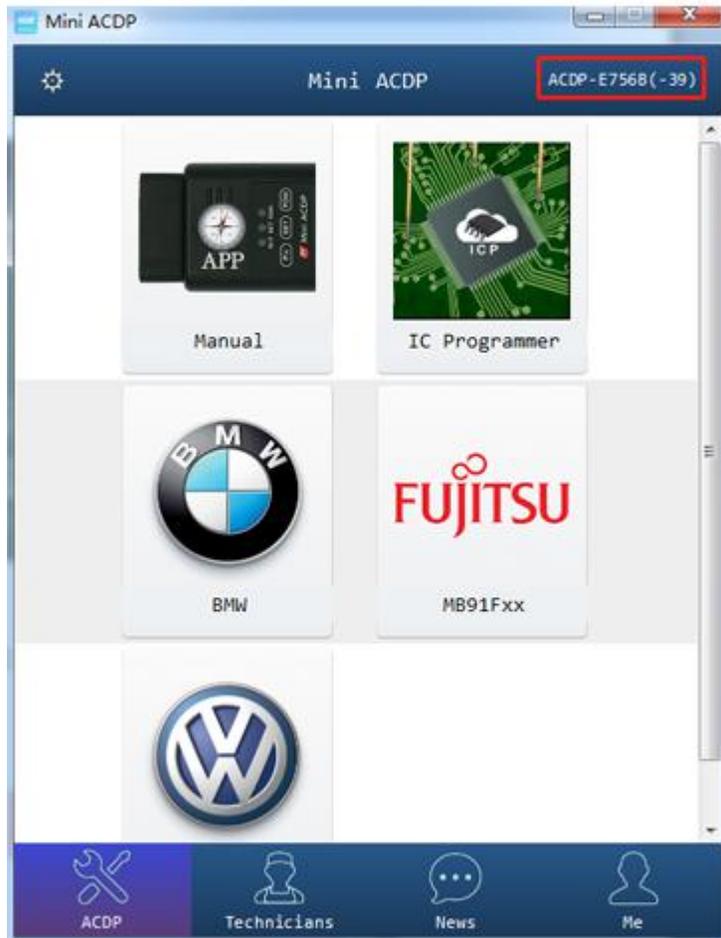

<http://www.chinacardiags.com/wholesale/yanhua-mini-acdp-programming-master.html>